EASY INSTRUCTIONS FOR INSERTING FASHION MODE® ZIPPERS

PLACKET PREPARATION

STAY-STITCH SEAM ALLOWANCE OF PLACKET.

MEASURE PLACKET 1" LONGER THAN ZIPPER TRACK.

IF SEAM ALLOWANCE IS NOT A FULL 5/8 INCH, ADD SEAM BINDING OR A SELF FABRIC STRIP OF MATERIAL.

MACHINE-BASTE PLACKET SEAM ALLOWANCE AND PRESS.

LAPPED APPLICATION

for Skirts, Slacks, Dresses, and Necklines

A. Machine-baste zipper to seam allowance for back portion of garment with zipper open and facing down.

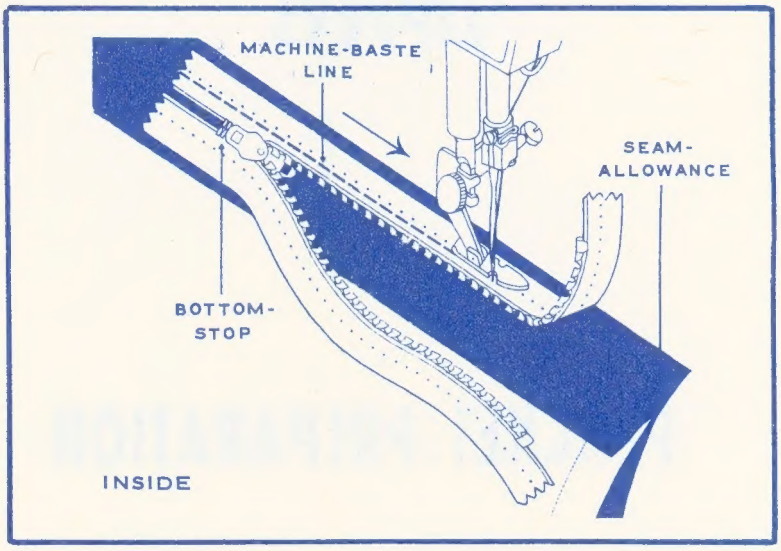

B. Close your zipper. With zipper facing you, edge-stitch along fold of fabric with zipper foot.

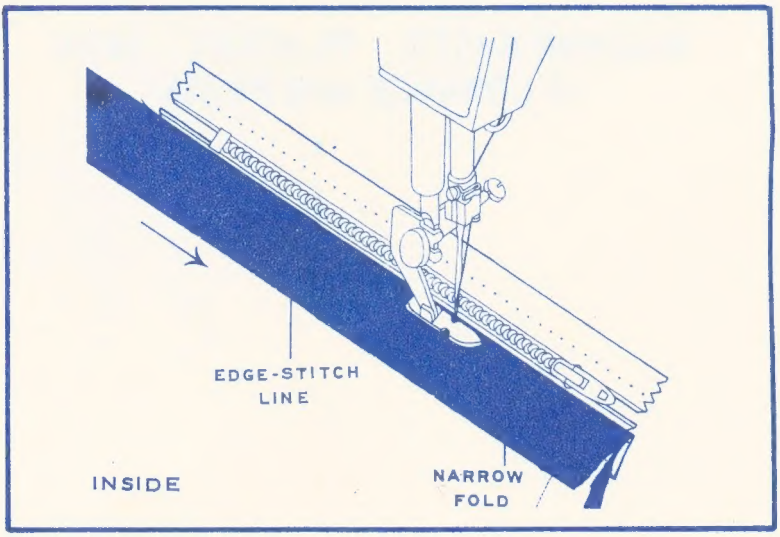

C. With zipper face down – press flat and stitch across bottom, next to bottom stop, and up length of zipper – use guide line on tape to guarantee straight, even line of stitching (For dress zipper – stitch across top).

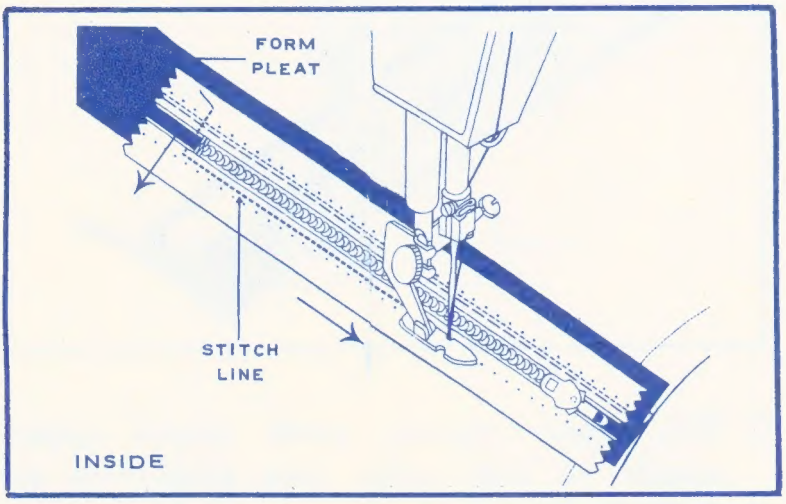

D. Press placket and remove basting stitches.

CENTERED APPLICATION

Necklines and Sleeves

A. Machine-baste one side of opened zipper to seam allowance.

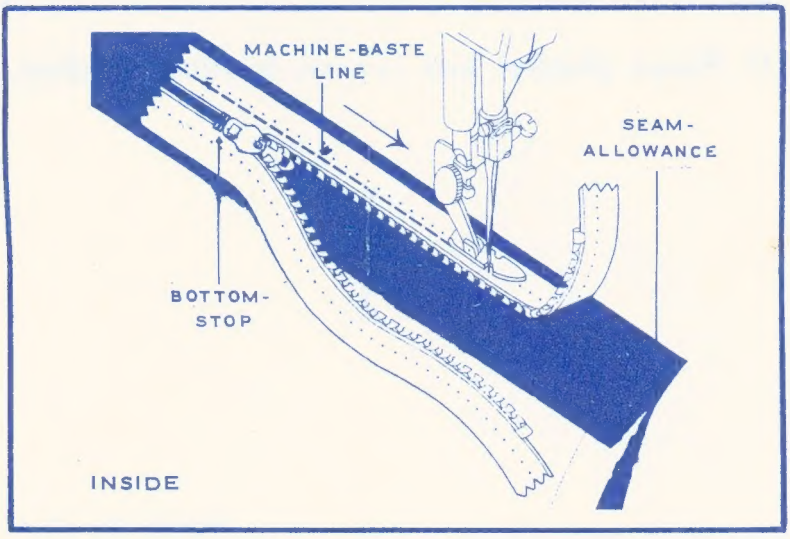

B. Machine-baste other side of opened zipper to seam allowance.

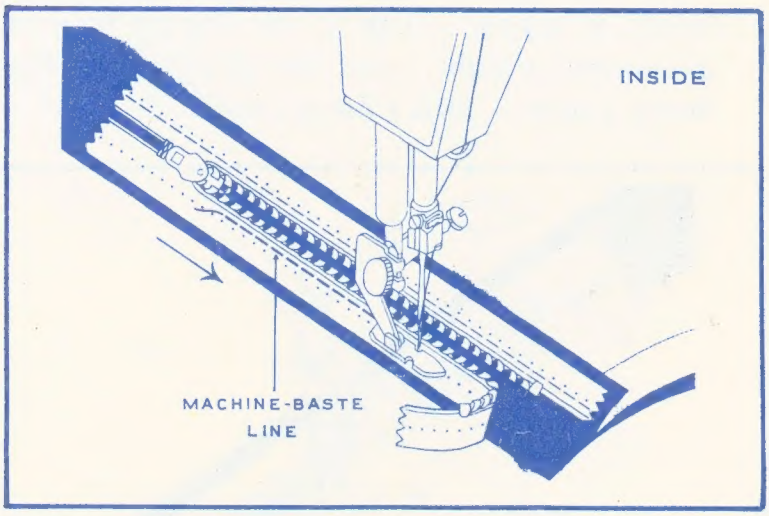

C. With zipper closed, stitch around zipper evenly on both sides (use guide line on tape). Make sure garment is completely flat.

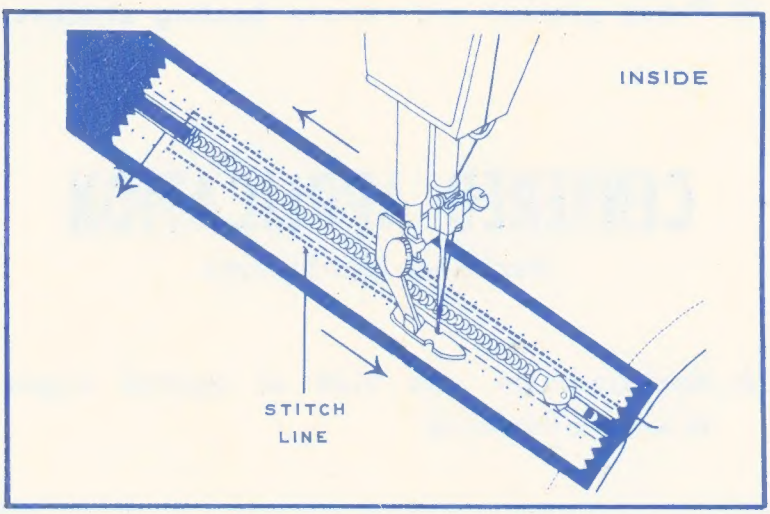

D. Press placket and remove basting stitches.

PRINTED IN U.S.A.